

PN# 750384C-BR

3-FUNCTION HYDRAULIC CONTROL VALVE

OPEN CENTER, NO POWER BEYOND HOSE: INSTALL PRESSURE HOSE IN EITHER OF THE TWO "P" PORTS AND INSTALL PLUG IN UNUSED "P" PORT. INSTALL RETURN HOSE IN EITHER OF THE TWO "T" PORTS AND INSTALL PLUG IN UNUSED "T" PORT. LEAVE PLUG INSTALLED IN "N" PORT.

OPEN CENTER, POWER BEYOND HOSE PRESENT:

INSTALL PRESSURE HOSE IN EITHER OF THE TWO "P" PORTS AND INSTALL PLUG IN UNUSED "P" PORT. INSTALL RETURN HOSE IN EITHER OF THE TWO "T" PORTS AND INSTALL PLUG IN UNUSED "T" PORT. INSTALL PRESSURE BEYOND HOSE IN FEMALE PORT OF POWER BEYOND SLEEVE.

CLOSED CENTER:

INSTALL PRESSURE HOSE IN EITHER OF THE TWO "P" PORTS AND INSTALL PLUG IN UNUSED "P" PORT. INSTALL RETURN HOSE IN EITHER OF THE TWO "T" PORTS AND INSTALL PLUG IN UNUSED "T" PORT. INSTALL POWER BEYOND SLEEVE IN PORT "N" AND INSTALL PLUG IN SLEEVE'S FEMALE PORT. REMOVE PRESSURE RELIEF VALVE CAP AND TURN PRESSURE RELIEF VALVE ALL THE WAY IN WITH HEX WRENCH. REPLACE CAP.


VALVE SPECS:

WORKING PORTS: #6 FEMALE BSPP (BRITISH PIPE THREAD)

PRESSURE, RELIEF, AND POWER BEYOND PORTS: #8 FEMALE BSPP (BRITISH PIPE THREAD)

INCLUDED ITEMS:

- POWER BEYOND SLEEVE WITH #6 FEMALE O-RING BOSS PORT.
- 1 PLUG / EACH FOR PRESSURE, RETURN, AND POWER BEYOND PORTS.
- BSPP - TO - JIC ADAPTERS FOR WORKING PORTS - HOSES WITH #8 FEMALE JIC TIPS WILL CONNECT TO THESE ADAPTERS.
- BSPP - TO - JIC ADAPTERS (1 / EACH) FOR PRESSURE AND RETURN PORTS - HOSES WITH #8 FEMALE JIC TIPS WILL CONNECT TO THESE ADAPTERS.

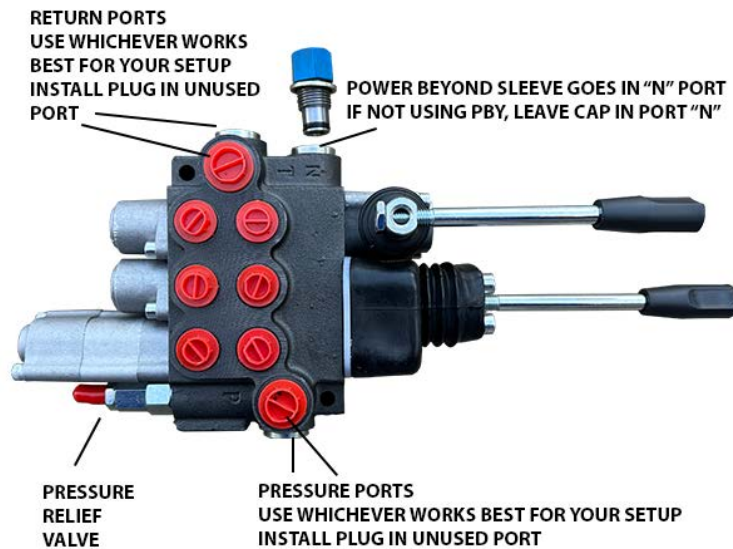

PRESSURE RELIEF VALVE CAP



PRESSURE RELIEF VALVE WITH CAP REMOVED

